 


WINvote™ VOTING MACHINE INSTRUCTIONS

Step 1:

START

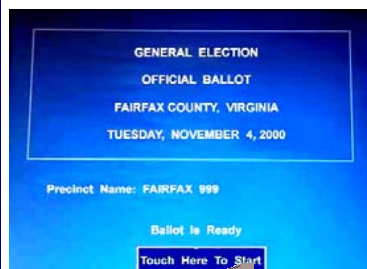


An Election Officer will insert a ballot card into the WINvote™ voting machine to activate the ballot.

Press Touch Here To Start, which is located at the bottom center of the screen, to begin voting.

PLEASE INFORM THE ELECTION OFFICER IF YOU NEED ASSISTANCE VOTING.

Step 2:

MAKE YOUR SELECTION

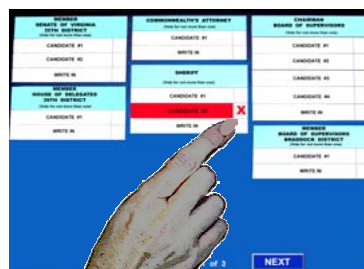

To make your selection, touch the candidate's name or answer.


A red "X" will appear and the box with the candidate's name or answer in it will be highlighted in red.

To change or cancel your selection, touch the box again.

Touch **NEXT** which is located in the lower right-hand side of the screen, to move to the next page of the ballot.

Step 3:

REVIEW YOUR VOTES ON SUMMARY PAGE

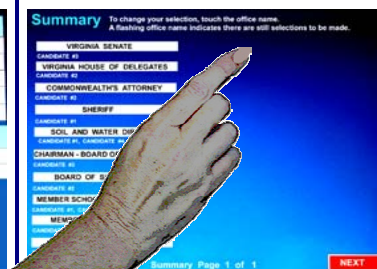

You have two options:

If a box is flashing, there are still choices to be made. Touch the office title or question to return to it and make a selection, then touch RETURN, which is located in the lower right-hand side of the screen, to continue.


OR

Touch **NEXT**, which is located in the lower right-hand side of the screen if **you are satisfied with your selections.**

You do not have to vote for everything on the ballot. It is your right to leave a box blank.

Step 4:

CAST YOUR VOTE

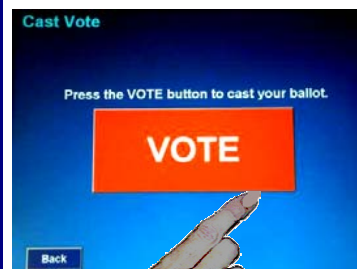

You have two options:

To cast your vote, touch the VOTE button.

OR

To make changes, touch the Back button, which is located in the lower left-hand side of the screen.

NOTE: once you "cast" your ballot, you cannot make any changes OR vote again.

Step 5:

VOTE CONFIRMATION



You will see this screen to indicate your votes have been recorded.

This screen will appear only for a few seconds.

You may now leave the voting booth.

Congratulations!
You have just voted in Fairfax County using the new WINvote™ voting system !

